

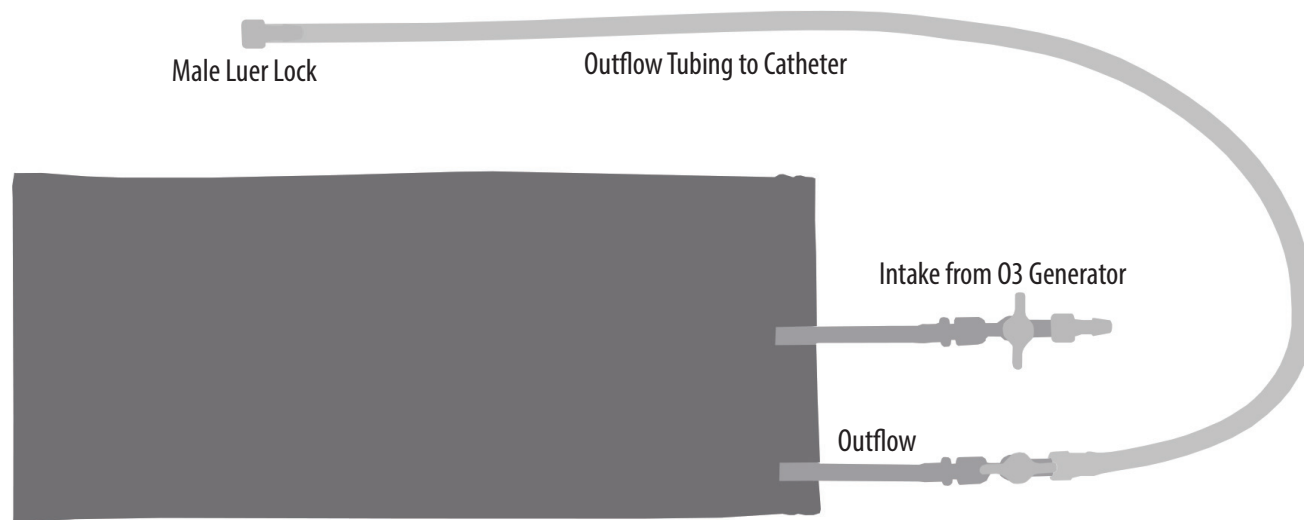


# Ozone Insufflation Bag

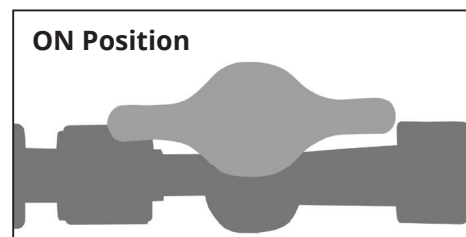

This bag is made of ozone resistant FEP Teflon and has a capacity of up to 1000 ml.

1. Attach the tubing coming from your ozone generator to the end of the intake tube in the middle of the insufflation bag.
2. Turn the intake valve to the ON position to allow air to flow and begin filling. Once the bag is full, turn the valve to the OFF position to stop the inflow of ozone. NOTE: VERY IMPORTANT: Be sure you do not overinflate or the bag can rupture and leak and is not repairable.
3. Remove the ozone tubing from the intake valve.
4. Attach your catheter to the male Luer lock adapter at the end of the outflow tubing, then insert the catheter.
5. Turn the outflow valve to the ON position and lightly press on the bag to force the ozone out of the catheter. NOTE: Do not over force the ozone gas out of the bag as this can also cause a rupture.

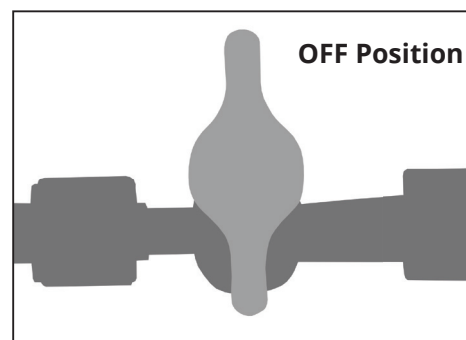

## Amounts and Fill Times

	125 cc	250 cc	500 cc	750 cc	1000 cc
1 LPM	7.5 sec	15 sec	30 sec	45 sec	1 min
3/4 LPM	11 sec	22.5 sec	45 sec	1 min	1.5 min
1/2 LPM	15 sec	30 sec	1 min	1.5 min	2 min
1/4 LPM	30 sec	1 min	2 min	3 min	4 min
1/8 LPM	1 min	2 min	4 min	6 min	8 min
1/16 LPM	2 min	4 min	8 min	12 min	16 min
1/32 LPM	4 min	8 min	16 min	24 min	32 min