


Basic Oil Bubbler - 500ml

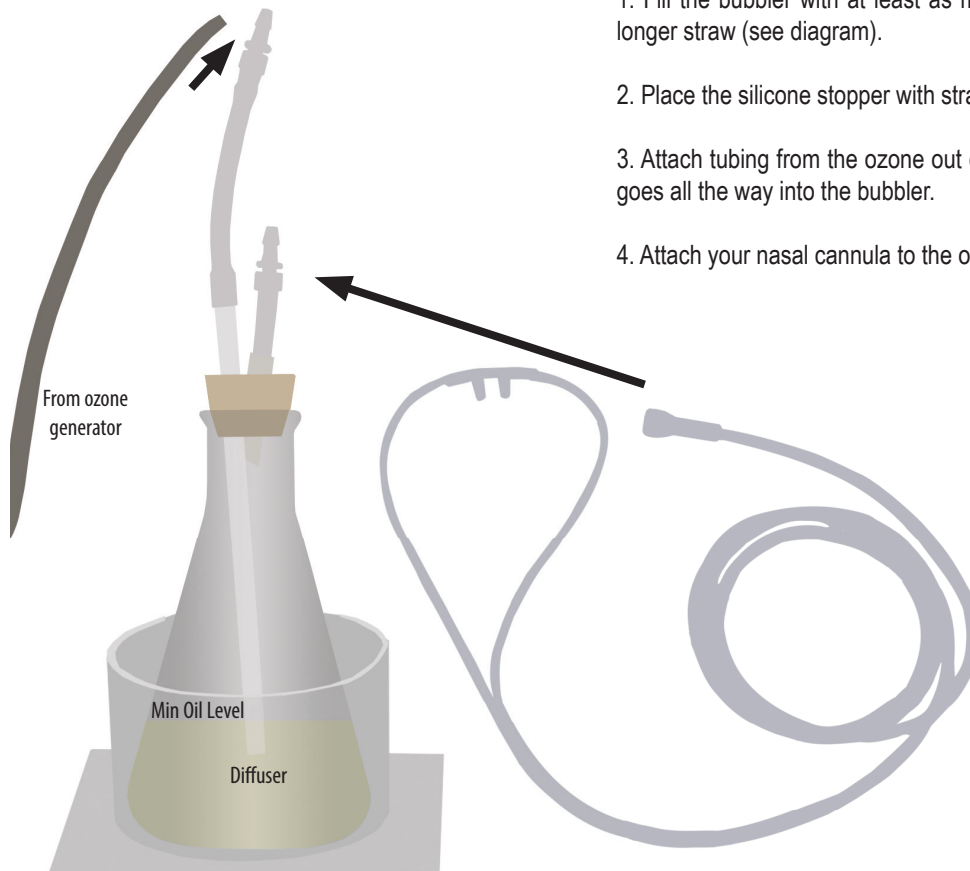

1. Fill the bubbler with at least as much oil as is needed to cover the bottom of the longer straw (see diagram).
2. Place the silicone stopper with straws attached into the bubbler.
3. Attach tubing from the ozone out of your ozone generator to the bubbler straw that goes all the way into the bubbler.
4. Attach your nasal cannula to the other straw.