




Stopper with Glass Stem and Destruct [1000ml] Stopper with Teflon Stem, Glass Diffuser and Destruct [2000ml] Extra Stopper

Setting up an Ozone Water Bubbler - 1000ml or 2000ml

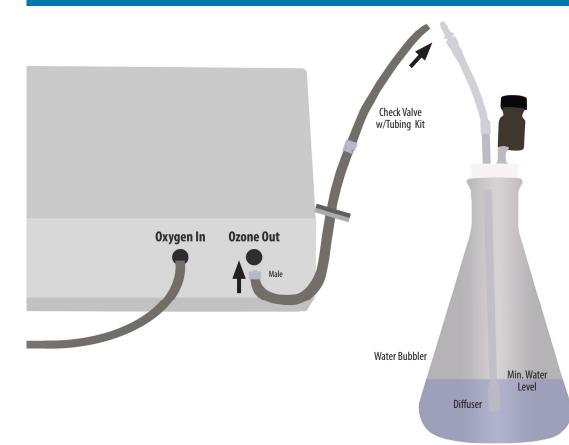

1. Fill the bubbler with at least as much water as is needed to cover the white diffuser (see diagram).

2. Place the silicone stopper with straws attached into the bubbler.

3. Connect one end of silicone tubing with a male Luer lock to the Ozone Out port on your ozone generator. Attach the other end to the water bubbler straw that goes all the way into the bubbler.

4. To fully saturate the water, run the ozone for 20-30 minutes, depending on the amount of water used.

5. Use the extra silicone stopper to plug the flask if you'd like to save ozonated water in the refrigerator. [Note: After 3-4 hours, you will need to ozonate the water again.]